





O6 SPA O5 COURTYARD



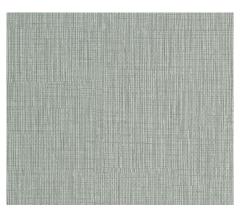

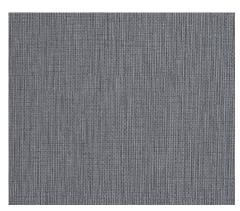

OI MIST O2 FOG O3 MINK







O4 THATCH O7 NAVAL O8 PLUM



## Sydney VHOO56

Coated Upholstery



54" Width

1" Vertical. 1" Horizontal Repeat

Fabric Content 100% Polyurethane (Polycarbonate), Polyester backing

California TB 117 Flammability

NFPA 260

**UFAC Class 1** 

A \* O #

Writer's Block™ Stain Resistance

20 oz Per Linear Yard Weight

ASTM D4154-13 250.000+ Double Rubs **Abrasion Rating** (Wyzenbeek Method) Results above 100.000 double rubs

> have not been shown to be a reliable indicator of increased fabric lifespan

7 Weeks ISO 1419:1995 Hydrolysis

Mildew Resistance **ASTM G21-13** Pass

Anti-Bacterial Pass **AATCC 147-2011** 

200 Hours AATCC 16.3-2014, Colorfastness to Light

Option 3

**AATCC 107-2013** 

**AATCC 8-2016** Colorfastness to Crocking 5.0 Wet, 5.0 Dry

20% Dilution

Cold Crack CFFA 6A-2010 - 20° F

Bleach Resistance

Sulfide Stain Resistance Yes

Pattern Direction

Pattern runs the length of the bolt.

Suitable For Healthcare, Hospitality, Contract, Education, Residential

Phthalate Free Reduced Environmental

Lead Free Impact

BPA Free/TRIS Free/Formaldehyde Free

Does not contain Conflict Minerals

Does not contain Flame Retardant Chemicals

Does not contain Anti-Microbial Chemicals

Does not contain Anti-Bacterial Chemicals

CARE AND CLEANING

Prompt cleaning is always recommended. Cleaning steps are listed by type of stain.

Regular Cleaning and Maintenance

Clean the soiled area with mild soap and water, then rinse with fresh water and wipe dry with a clean cloth.

Dirt Grime

Food Stains / Oils

Wipe affected area with a soft cloth with appropriate pressure. If some stain persists, clean with mild soap and water. Rinse with fresh water and wipe dry.

Mustard Ketchup Chocolate Coffee/Tea Salad Dressing

Ink Marks / Graffiti

Rub the affected area with a soft dry cloth with firm pressure. If some stain is still present spray it with a 70% dilution of isopropyl alcohol and water and wipe. Rinse with fresh water and wipe dry.

Ballpoint Pen Permanent Marker

Denim Dye Transfer

This material is designed to withstand the transfer of most types of Indigo Dye. In the case that faint denim dye transfer is visible, this can typically be removed with a 70% dilution of isopropyl alcohol and water.

Blue Jeans

Healthcare / Disinfection

Wipe the affected area with a soft cloth with appropriate pressure. If some stain persists, spray it with a 70% dilution of isopropyl alcohol and water and wipe. Rinse with fresh water and wipe dry.

Blood Urine Betadine

The use of commercial vinyl conditioners and protectants is not recommended.

Note: The information in this cleaning guide refers to performance in specific tests conducted under laboratory conditions. This information is not a guarantee that every stain will be removed completely. Some residual ghosting may be present after all cleaning steps are followed.



